
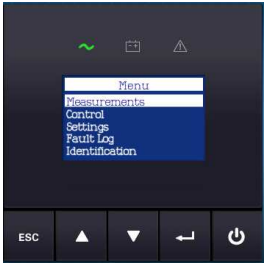
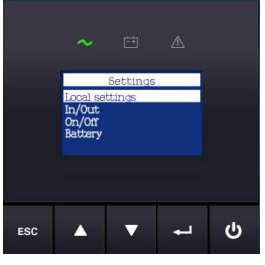
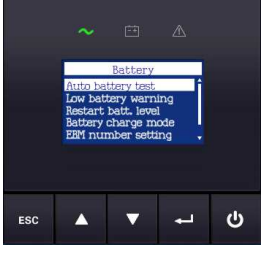


How to Set Maximum Run Time on Eaton 5PX UPS

	<p>1.) Press the “Enter” button to bring up the menu.</p>
	<p>2.) Use the “Up/Down” buttons to scroll down to “Settings”.</p> <p>3.) Press the “Enter” button to get into the settings.</p>
	<p>4.) Scroll down to “Battery” and press “Enter” to select the battery settings.</p>
	<p>5.) Scroll down to “Low battery warning”.</p> <p>6.) Change the default 20%* down to 0% by using the “Down” key.</p> <p>7.) Press “Enter” to set the 0% selection.</p> <p>8.) Confirm the setting has been saved and use the “ESC” button to exit the menu system.</p>

* Please note: Unlike other Eaton UPS product the 5PX works on percent (%) of battery left not time in minutes. Setting the “Low battery warning” level to 0% is the only way to get all of the specified run time from the batteries, with or without any EBM’s.